



# Ezy-Fit

## Tile Access Panel Kit

**FOR A FAST, FLEXIBLE AND PROFESSIONAL FINISH EVERY TIME**

## INSTALLATION GUIDE

### PRODUCT DESCRIPTION

Magnetic on one side and self-adhesive on the other, IOBAC Magnetic Access Tabs work by fixing the adhesive side to the back of a porcelain or ceramic tile (300mm x 350-450mm or 600mm x 600mm) in conjunction with IOBAC magnetic receptive 3mm crumb rubber packers.

There are two types of Ezy-Fit Tile Access Panel kits:

- Soil and Vent Pipe (SVP)
- Bath Panel (BP)



### INSTALLATION STEPS

#### 1) PREPARATION

Ensure all bases including the wall and back of porcelain/ceramic tiles are clean and dry.

Ensure there is no contamination to the magnetic receptive packer as this could affect performance and hold.

#### 2) FIX MAGNETIC ACCESS TAB TO TILE

Peel tab from silicone liner and fix the adhesive side to the back of the porcelain/ceramic tile as per positions shown overleaf.

#### 3) FIX CRUMB PACKER TO MAGNETIC ACCESS TAB

Remove protective film liner from magnetic receptive 3mm crumb rubber packer and place onto the Magnetic Access Tab as per positions shown overleaf.

Once the packer is in position, apply a suitable moisture tolerant adhesive such as Soudal Fix All High Tack Super Strong hybrid polymer or standard porcelain/ceramic tile adhesive generously to the back of the magnetic receptive packer.

#### 4) POSITION TILE

Position the ceramic tile with the Magnetic Access Tabs and magnetic receptive packer onto the wall or bath panel. If needed, manoeuvre until level and flush. Then hold the tile in place for 1-3 minutes to ensure good initial bond and that the tile does not move.



# Ezy-Fit

## Tile Access Panel Kit

FOR A FAST, FLEXIBLE AND PROFESSIONAL FINISH EVERY TIME


## INSTALLATION GUIDE

### MAGNETIC ACCESS TAB AND PACKER POSITIONING CONFIGURATIONS

*(As a guide, the Magnetic Access Tabs and Packers should be positioned as shown in the following diagrams. When installing to the wall ensure that pressure is applied to the packer through the porcelain/ceramic tile to achieve good magnetic/adhesion and bond to the wall. Please note that this is a guide only - additional Magnetic Access Tabs and Packers may be required dependent on tile size and weight.)*

### SVP KITS - 300 x 350mm TILES


#### MAGNETIC ACCESS TAB POSITIONS

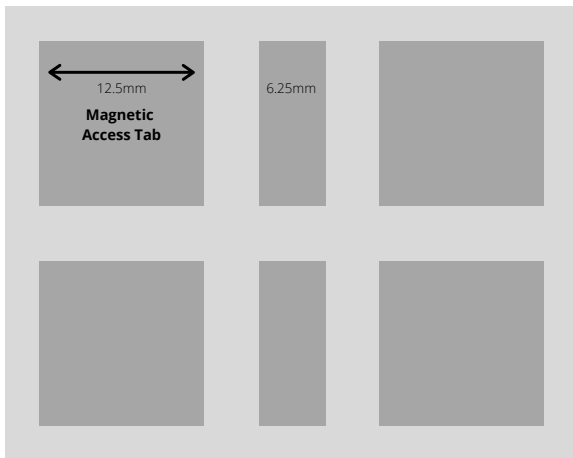

#### PACKER POSITIONS



#### MAGNETIC ACCESS TAB & PACKER POSITIONS

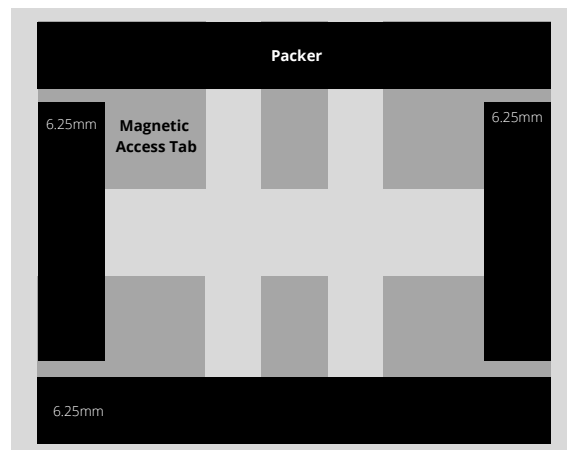



# Ezy-Fit

## Tile Access Panel Kit

**FOR A FAST, FLEXIBLE AND PROFESSIONAL FINISH EVERY TIME**


## INSTALLATION GUIDE

### MAGNETIC ACCESS TAB AND PACKER POSITIONING CONFIGURATIONS

*(As a guide, the Magnetic Access Tabs and Packers should be positioned as shown in the following diagrams. When installing to the wall ensure that pressure is applied to the packer through the porcelain/ceramic tile to achieve good magnetic/adhesion and bond to the wall. Please note that this is a guide only - additional Magnetic Access Tabs and Packers may be required dependent on tile size and weight.)*

### SVP KITS - 300 x 450mm TILES


#### MAGNETIC ACCESS TAB POSITIONS

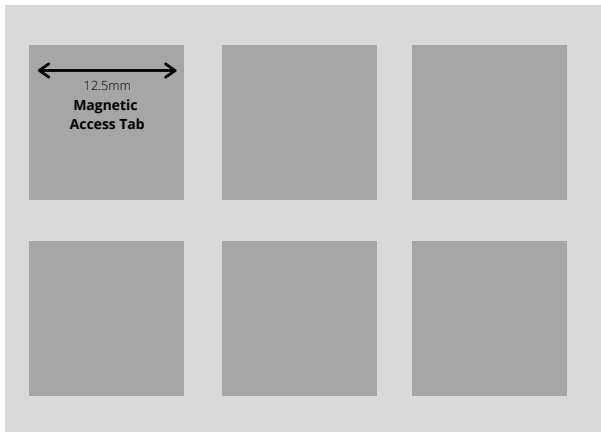

#### PACKER POSITIONS



#### MAGNETIC ACCESS TABS & PACKER POSITIONS

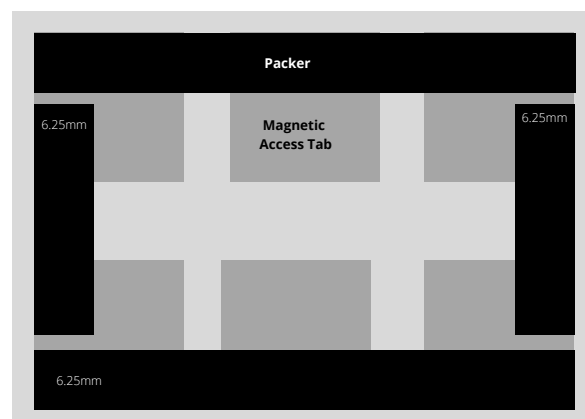



# Ezy-Fit

## Tile Access Panel Kit

**FOR A FAST, FLEXIBLE AND PROFESSIONAL FINISH EVERY TIME**


## INSTALLATION GUIDE

### MAGNETIC ACCESS TAB AND PACKER POSITIONING CONFIGURATIONS


*(As a guide, the Magnetic Access Tabs and Packers should be positioned as shown in the following diagrams. When installing to the wall ensure that pressure is applied to the packer through the porcelain/ceramic tile to achieve good magnetic/adhesion and bond to the wall. Please note that this is a guide only - additional Magnetic Access Tabs and Packers may be required dependent on tile size and weight.)*

### BP KITS - 600 x 600mm TILES

#### MAGNETIC ACCESS TAB POSITIONS

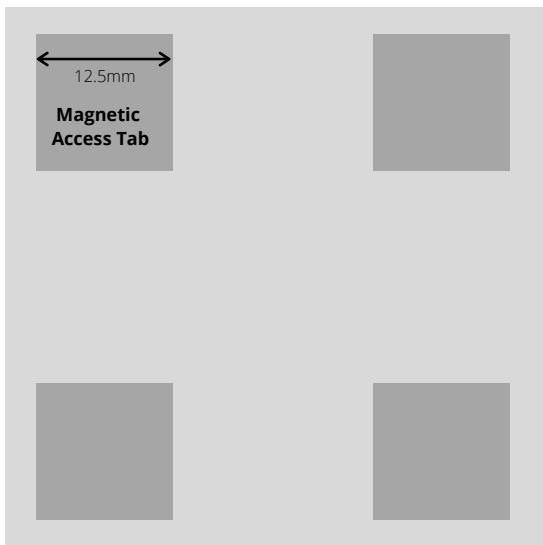

#### PACKER POSITIONS

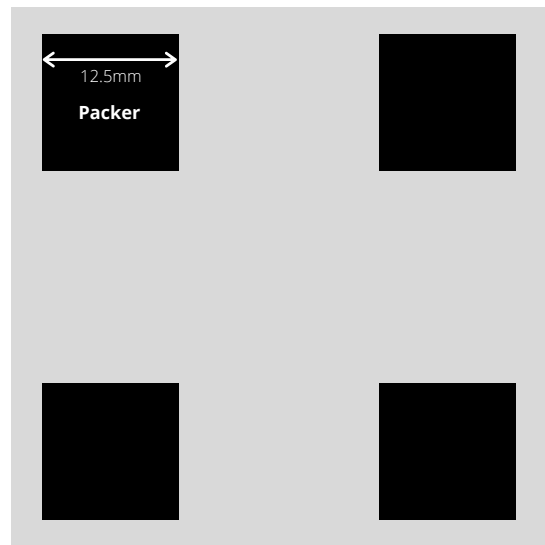

Ezy-Fit Access Panel Kits are manufactured by IOBAC UK Ltd  
Unit 9, Berry Court Farm, Bramley Road, Tadley, RG26 5AT  
Email: [info@iobac.com](mailto:info@iobac.com)  
Telephone: +44 (0)118 334 2682