



Ezy-Fit

Tile Access Panel Kit

FOR A FAST, FLEXIBLE AND PROFESSIONAL FINISH EVERY TIME

INSTALLATION GUIDE

PRODUCT DESCRIPTION

Ezy-Fit Tile Access Panel Kits consist of 2 parts:

- Magnetic Access Tabs
- Magnetically Receptive Rubber Crumb Packers

There are two types of Ezy-Fit Tile Access Panel kits:

- Soil and Vent Pipe (SVP) for porcelain or ceramic tiles (300 x 350-450mm)
- Bath Panel (BP) porcelain or ceramic tiles (600x 600mm)



INSTALLATION STEPS

1) PREPARATION

Ensure all bases including the wall and back of porcelain/ceramic tiles are clean and dry.

Ensure there is no contamination to the magnetic receptive packer as this could affect performance and hold.

2) FIX MAGNETIC ACCESS TAB TO TILE

Peel tab from silicone liner and fix the adhesive side to the back of the porcelain/ceramic tile as per positions shown overleaf.

3) FIX CRUMB PACKER TO MAGNETIC ACCESS TAB

Remove protective film liner from magnetic receptive 3mm crumb rubber packer and place onto the Magnetic Access Tab as per positions shown overleaf.

Once the packer is in position, apply a suitable moisture tolerant adhesive such as Soudal Fix All High Tack Super Strong hybrid polymer or standard porcelain/ceramic tile adhesive generously to the back of the magnetic receptive packer.

4) POSITION TILE

Position the ceramic tile with the Magnetic Access Tabs and magnetic receptive packer onto the wall or bath panel. If needed, manoeuvre until level and flush. Then hold the tile in place for 1-3 minutes to ensure good initial bond and that the tile does not move.



Ezy-Fit

Tile Access Panel Kit

FOR A FAST, FLEXIBLE AND PROFESSIONAL FINISH EVERY TIME


INSTALLATION GUIDE

MAGNETIC ACCESS TAB AND PACKER POSITIONING CONFIGURATIONS

(As a guide, the Magnetic Access Tabs and Packers should be positioned as shown in the following diagrams. When installing to the wall ensure that pressure is applied to the packer through the porcelain/ceramic tile to achieve good magnetic/adhesion and bond to the wall. Please note that this is a guide only - additional Magnetic Access Tabs and Packers may be required dependent on tile size and weight.)

SVP KITS - 300 x 350mm TILES


MAGNETIC ACCESS TAB POSITIONS

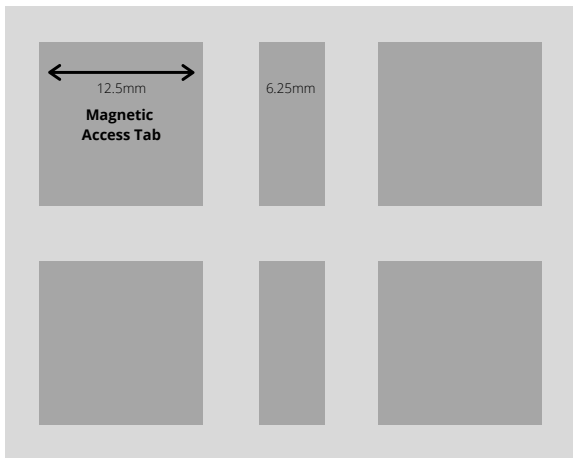

PACKER POSITIONS



MAGNETIC ACCESS TAB & PACKER POSITIONS

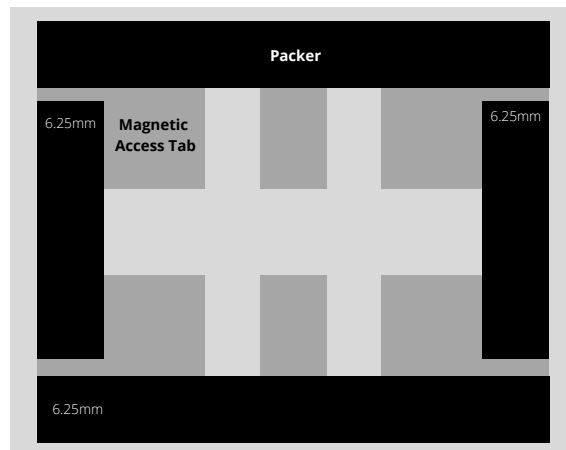



Ezy-Fit

Tile Access Panel Kit

FOR A FAST, FLEXIBLE AND PROFESSIONAL FINISH EVERY TIME


INSTALLATION GUIDE

MAGNETIC ACCESS TAB AND PACKER POSITIONING CONFIGURATIONS


(As a guide, the Magnetic Access Tabs and Packers should be positioned as shown in the following diagrams. When installing to the wall ensure that pressure is applied to the packer through the porcelain/ceramic tile to achieve good magnetic/adhesion and bond to the wall. Please note that this is a guide only - additional Magnetic Access Tabs and Packers may be required dependent on tile size and weight.)

SVP KITS - 300 x 450mm TILES


MAGNETIC ACCESS TAB POSITIONS

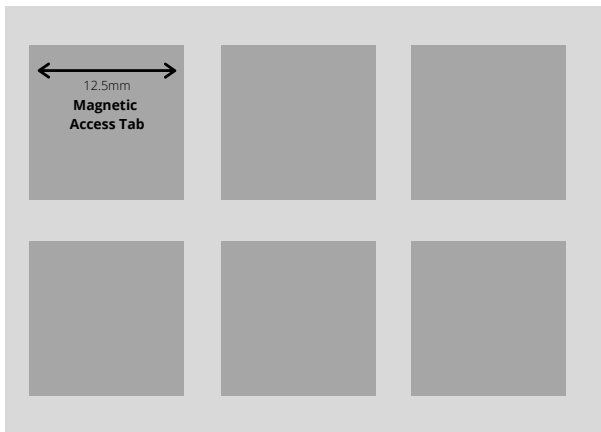

PACKER POSITIONS

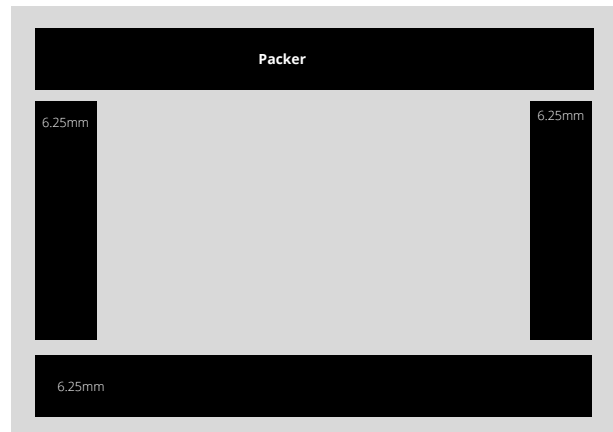

MAGNETIC ACCESS TABS & PACKER POSITIONS

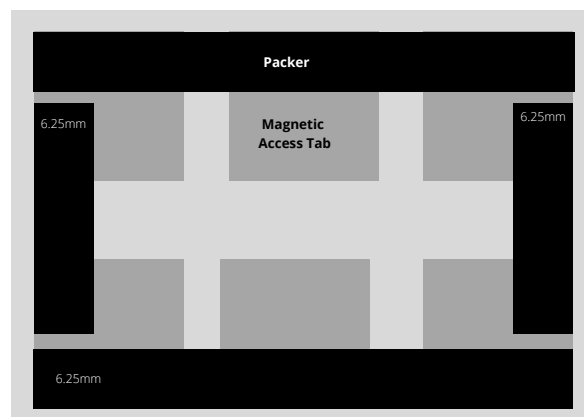



Ezy-Fit

Tile Access Panel Kit

FOR A FAST, FLEXIBLE AND PROFESSIONAL FINISH EVERY TIME


INSTALLATION GUIDE

MAGNETIC ACCESS TAB AND PACKER POSITIONING CONFIGURATIONS


(As a guide, the Magnetic Access Tabs and Packers should be positioned as shown in the following diagrams. When installing to the wall ensure that pressure is applied to the packer through the porcelain/ceramic tile to achieve good magnetic/adhesion and bond to the wall. Please note that this is a guide only - additional Magnetic Access Tabs and Packers may be required dependent on tile size and weight.)

BP KITS - 600 x 600mm TILES

MAGNETIC ACCESS TAB POSITIONS

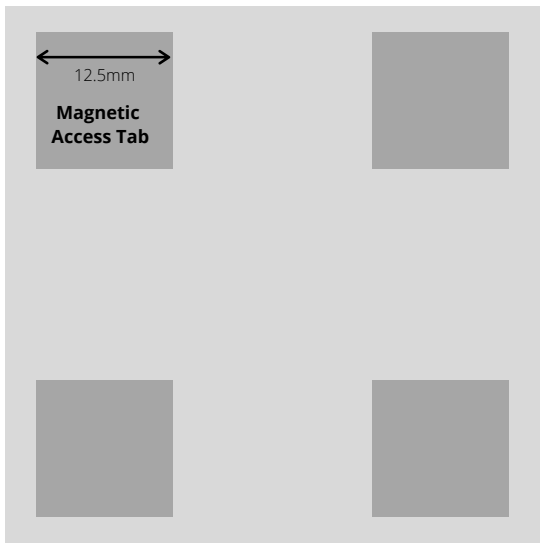

PACKER POSITIONS

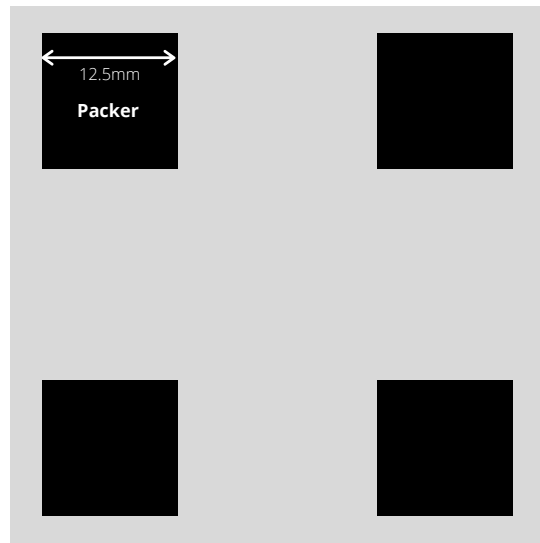

Ezy-Fit Tile Access Panel Kits are manufactured by IOBAC UK Ltd
Unit 9, Berry Court Farm, Bramley Road, Tadley, RG26 5AT
Email: ian@iobac.com
Telephone: +44 (0)7703 132494